

USB kabel s konektorem miniUSB 5pinB

Katalogové číslo: 11.99.8718

Katalogové číslo: 11.02.8718

Náhrada za originální kabely:

Sony: VMC-14UMB, 182393111

Aiptek: ZCB-PKX

Canon: IFC-300PCU, IFC-400PCU, 906A001

Concord: 511821

Fuji: FZ05365-100

JVC: QAM0324-001, QAM0538-001, QAM0719-001

Konica: USB-810

Motorola: SKN6371C

Nikon: UC-E4, UC-E5

Nokia: DKE-2

Olympus:- OEM kabel CBUSB4, CB-USB4

Panasonic: VFA0453, VFA0454, K2KZ4CB00010, K1HA09BD0001, K1HA05CD0014, K1HA05CD0005, EV12531

Pentax: I-USB6

Samsung: AD39-00073A, AD39-00073D, AD39-00073AG, AD39-00132A, AH39-00498AG, AH39-00589AG

HP:- 8121-0637 nebo kabel s feritem 8121-0721

Vivitar: 60313

Kodak: U-5A

Použitelné pro zařízení:

(fotoaparáty/kamery) (MP3) (mobilní telefony/PDA) (GPS)

Acer	CL-5300
Agfa	Easy Pix SX
Aiptek	A-HD, DAM-Z5X, DUO-V39, DZO-V3T, DZO-V5T, DZO-V37, DZO-V50, DZO-V58N, DZO-Z33, DZO-Z53, GO-HD, IS-DV, IS-DV2, IS-DV2.4, IS-DV2+, MZ-DV, Pocket DV4100, Pocket DV4100M, Pocket DV4500, Pocket DV5100M, Pocket DV5800, Pocket DV5900, PocketCam 4000, PocketCam X, V5V, Zoom DV
Argus	DC-1512, DC-1600, DC-1620, DC-2200, DC-2250, DC-2700, DC-3185, DC-3200, DC-3270DV, DC-3500, DC-3510, DC-3515, DC-3520, DC-3530, DC-3550, DC-3640, QC-1620, QC-1730, QC-2185, QC-3185, QC-3270DV, QC-5150
Archos	Jukebox FM Recorder 20, Jukebox Multimedia 10, ONDIO
BenQ	DC1300
BlackBery	6210, 6220, 6230, 6280, 6280, 6280, 6510, 7100, 7210, 7230, 7250, 7270, 7280, 7290, 7510, 7520, 7100g, 7100i, 7100r, 7100t, 7100v, 7100x, 7105t, 7130c, 7130e, 7130g, 7130v, 8100 Pearl, 8100c, 8300 Curve, 8700c, 8700c, 8700f, 8700g, 8700g, 8700r, 8700t, 8700v, 8700v, 8703e, 8707g, 8707v, 8800, 8800c, 8800r, 8820, 8830
Bushnell	NAV500
Canon	DC10, DC20, DC22, DC220, DC230, DC40, DC410, DC420, DC50, Digital

	IXUS 30, Digital IXUS 300, Digital IXUS 330, Digital IXUS 40, Digital IXUS 400, Digital IXUS 430, Digital IXUS 500, Digital IXUS 55, Digital IXUS 60, Digital IXUS 65, Digital IXUS 70, Digital IXUS 700, Digital IXUS 75, Digital IXUS 750, Digital IXUS 80 IS, Digital IXUS 800 IS, Digital IXUS 85 IS, Digital IXUS 850 IS, Digital IXUS 860 IS, Digital IXUS 90 IS, Digital IXUS 900 Ti, Digital IXUS 960 IS, Digital IXUS 970 IS, Digital IXUS i, Digital IXUS i5, Digital IXUS i7 – Cradle, Digital IXUS I Zoom, Digital IXUS II, Digital IXUS IIs, Digital IXUS Wireless, Elura 100, Elura 40MC, Elura 50, Elura 60, Elura 65, Elura 70, Elura 80, Elura 85, Elura 90, EOS 10D, EOS 1000D, EOS 1D Mark II, EOS 1D Mark II N, EOS 1Ds Mark II, EOS 20D, EOS 30D, EOS 40D, EOS 400D, EOS 5D, EOS Digital Rebel, EOS Digital Rebel XT, EOS Digital Rebel XTi, GL2, Optura 10, Optura 20, Optura 200MC, Optura 30, Optura 300, Optura 40, Optura 400, Optura 50, Optura 500, Optura 60, Optura 600, Optura S1, Optura Xi, PowerShot A10, PowerShot A100, PowerShot A1000 IS, PowerShot A20, PowerShot A200, PowerShot A2000 IS, PowerShot A30, PowerShot A300, PowerShot A310, PowerShot A40, PowerShot A400, PowerShot A410, PowerShot A420, PowerShot A430, PowerShot A460, PowerShot A470, PowerShot A510, PowerShot A520, PowerShot A530, PowerShot A540, PowerShot A550, PowerShot A560, PowerShot A570 IS, PowerShot A580, PowerShot A590 IS, PowerShot A60, PowerShot A610, PowerShot A620, PowerShot A630, PowerShot A640, PowerShot A650 IS, PowerShot A70, PowerShot A700, PowerShot A710 IS, PowerShot A720 IS, PowerShot A75, PowerShot A80, PowerShot A85, PowerShot A95, PowerShot E1, PowerShot G10, PowerShot G11, PowerShot G3, PowerShot G5, PowerShot G6, PowerShot G7, PowerShot G9, PowerShot Pro 1, PowerShot S1 IS, PowerShot S2 IS, PowerShot S3 IS, PowerShot S30, PowerShot S300, PowerShot S330, PowerShot S40, PowerShot S400, PowerShot S410, PowerShot S45, PowerShot S5 IS, , PowerShot S50, PowerShot S500, PowerShot S60, PowerShot S70, PowerShot S80, PowerShot SD10, PowerShot SD100, PowerShot SD1000, PowerShot SD110, PowerShot SD1100 IS, PowerShot SD20, PowerShot SD200 PowerShot SD30, PowerShot SD300, PowerShot SD330, PowerShot SD40 – Cradle, PowerShot SD400, PowerShot SD430, PowerShot SD450, PowerShot SD500, PowerShot SD550, PowerShot SD600, PowerShot SD630, PowerShot SD700 IS, PowerShot SD750, PowerShot SD800 IS, PowerShot SD850 IS, PowerShot SD870 IS, PowerShot SD880 IS, PowerShot SD890 IS, PowerShot SD900, PowerShot SD950 IS, PowerShot SX10 IS, PowerShot SX100 IS, PowerShot SX110 IS, PowerShot TX1, VIXIA HF10, VIXIA HF11, VIXIA HF100, VIXIA HG10, VIXIA HG20, VIXIA HG21, VIXIA HR10, VIXIA HV10, VIXIA HV20, VIXIA HV30, XL1, XL1S, ZR200, ZR300, ZR400, ZR45MC, ZR50MC, ZR600, ZR65MC, ZR70MC, ZR700, ZR830, ZR85, ZR850, ZR90, ZR960
Casio	EX-Z1000 – Cradle, GV-10, GV-20, QV-20, QV-4000X , QV-4000, QV5000SX, QV-5700, QV-R3, QV-R4, QV-R40, QV-R41, QV-R51, QV-R62
Classic	CHD500 Jukebox , MP6410
Concord	DV2020, Eye-Q 1000, Eye-Q 2040, Eye-Q 2133Z, Eye-Q 3040AF, Eye-Q 3042AF, Eye-Q 3043, Eye-Q 3045, Eye-Q 3047, Eye-Q 3103, Eye-Q 3120AF, Eye-Q 3132Z, Eye-Q 3340Z , Eye-Q 3341Z, Eye-Q 3345Z, Eye-Q 3346Z, Eye-Q 3X, Eye-Q 4060 AF, Eye-Q 4340Z, Eye-Q 4360Z , Eye-Q 4363Z , Eye-Q 5062AF, Eye-Q 5330Z, Eye-Q 5345Z, Eye-Q Duo 1300, Eye-Q Duo 2000, Eye-Q Duo LCD, Eye-Q Go LCD, Eye-Q Go 2000, Eye-Q Go Wireless
Contax	TVS Digital, SL300RT
Cool-iCam	Aqua 2100
Cowon	A2 , iAudio G2 , iAudio G3 , iAudio M3 - Cradle , iAudio U2 , iAudio X5L , iAudio X5 - Cradle ,
Creative	3200Z , Jukebox 2 , Jukebox 2LX , Jukebox 3 , Jukebox Zen , Jukebox Zen 2.0 ,

	Jukebox Zen NX, Jukebox Zen Xtra, MuVo2, MuVo2 X-Trainer, NOMAD Jukebox 2, NOMAD MuVo2, NOMAD Zen Xtra, NOMAD Zen NX
DXG	DXG-202V, DXG-228, DXG-301V, DXG-305V, DXG-505V, DXG-506V, DXG-521
Epson	L500V
Finedigital	FD 300, FD 400, FD 500, FD M300
Fortuna	NA View GPS-430, NA View GPS-615B, NA View PNA 455
Fuji	Axia IX-100, Axia Slimshot, FinePix A120, FinePix A345, FinePix A350, FinePix A360, FinePix A370, FinePix A400, FinePix A500, FinePix A600, FinePix A605, FinePix A610, FinePix A700, FinePix A800, FinePix A820, FinePix A900, FinePix A920, FinePix E900, FinePix Q1 Digital, FinePix S20PRO, FinePix S3 Pro, FinePix S3 Pro UVIR, FinePix S5 Pro, FinePix S5000, FinePix S5100, FinePix S5200, FinePix S5500, FinePix S5600, FinePix S6000fd, FinePix S7000, FinePix S9100, FinePix S9500, FinePix S9600, FinePix Z1 – Cradle, FinePix Z2 – Cradle, FinePix Z3 - Cradle
Gateway	DC-M40, DC-M42, DC-M50, DC-T20, DC-T23, DV-S20
Hitachi	DZMV200A, DZMV230A, DZMV270A, DZMV350A, DZMV380A
Holux	GPSmile 53, GR-230 Bluetooth Receiver, GR-231, GR-239 Bluetooth
HP	PhotoSmart 120, PhotoSmart 120CSE, PhotoSmart 120v, PhotoSmart 120xi, PhotoSmart 318, PhotoSmart 318SE, PhotoSmart 318xi, PhotoSmart 320, PhotoSmart 320v, PhotoSmart 320xi, PhotoSmart 433, PhotoSmart 433v, PhotoSmart 433xi, PhotoSmart 435, PhotoSmart 435v, PhotoSmart 435xi, PhotoSmart 612, PhotoSmart 612Cxi, PhotoSmart 612xi, PhotoSmart 612, PhotoSmart 620, PhotoSmart 620v, PhotoSmart 620xi, PhotoSmart 635, PhotoSmart 635v, PhotoSmart 635xi, PhotoSmart 715, PhotoSmart 715Cxi, PhotoSmart 715v, PhotoSmart 715xi, PhotoSmart 720, PhotoSmart 720v, PhotoSmart 720xi, PhotoSmart 733, PhotoSmart 735, PhotoSmart 735ps, PhotoSmart 735v, PhotoSmart 735xi, PhotoSmart 850, PhotoSmart 850xi, PhotoSmart 8881 Dock, PhotoSmart 8886 Dock, PhotoSmart 912, PhotoSmart 912v, PhotoSmart 912xi, PhotoSmart 935, PhotoSmart 935v, PhotoSmart 935xi, PhotoSmart 945, PhotoSmart 945v, PhotoSmart 945xi, PhotoSmart E217, PhotoSmart E317, PhotoSmart E327, PhotoSmart E327v, PhotoSmart E427, PhotoSmart M22, PhotoSmart M23, PhotoSmart M305, PhotoSmart M305v, PhotoSmart M307, PhotoSmart M307v, PhotoSmart M307xi, PhotoSmart M407, PhotoSmart M407v, PhotoSmart M415, PhotoSmart M425, PhotoSmart M437, PhotoSmart M440, PhotoSmart M447, PhotoSmart M447v, PhotoSmart M525, PhotoSmart M527, PhotoSmart M537, PhotoSmart M540, PhotoSmart M627, PhotoSmart M630, PhotoSmart R607, PhotoSmart R707, PhotoSmart R707v, PhotoSmart R707xi, PhotoSmart R717, PhotoSmart R725, PhotoSmart R725v, PhotoSmart R725xi, PhotoSmart R727, PhotoSmart R742, PhotoSmart R742v, PhotoSmart R817 – Cradle, PhotoSmart R818, PhotoSmart R837, PhotoSmart R847, PhotoSmart R937
HTC	2125, 8125, 8525, Dash s620, MDA Smartphone, Mogul PPC-6800, P3450, S710 Vox, SDA Smartphone, Wing, X5700, XV6700 Smartphone, Touch S1
Chronos	SP-3110, SP-5110
iRiver	H100, H120, H140, H300, H320, H340, iFP-1000, iFP-1090, iFP-1095, iFP-1099, iFP-300, iFP-340, iFP-380T, iFP-390T, iFP-395T, iFP-399T, iFP-700, iFP-780, iFP-790, iFP-795, iFP-799, iFP-880, iFP-890, iFP-895, iFP-899, iFP-900, iFP-990, iFP-995, iFP-999, iGP-100, N10, PMC-120, PMP-120, PMP-140, T10, T30
JVC	GR-D201US, GR-D230US, GR-D270US, GR-D271US, GR-D275US, GR-D290US, GR-D295US, GR-D370US, GR-D371US, GR-D372US, GR-D375US, GR-D390US, GR-D395US, GR-D396US, GR-D650US, GR-D70US, GR-D71US, GR-D72US, GR-D73US, GR-D74US, GR-D770, GR-D790US, GR-D796, GR-D870US, GR-D875US, GR-D90, GR-D90US, GR-D91US, GR-

	D93US, GR-D94US, GR-DF430US, GR-DF450US, GR-DF470US, GR-DF550US, GR-DV500US, GR-DV800US, GR-DV801US, GR-DVL510U, GR-DVL512U, GR-DVL520U, GR-DVL522U, R-DVL720U, GR-DVL725U, GR-DVL815U, GR-DVL817U, GR-DVL820U, GR-DVL822U, GR-DVL915U, GR-DVL920U, GR-DVM76U, GR-DVM96U, GR-DX75US, GR-DX77US, GR-DX95US, GR-DX97US, GR-DX300US, GR-DX307US, GR-DZ7US, GR-HD1US, GR-X5US, GZ-HD10, GZ-HD3, GZ-HD30, GZ-HD40, GZ-HD5, GZ-HD6, GZ-HD7, GZ-MC100US, GZ-MC200US, GZ-MC500US, GZ-MG150US, GZ-MG155US, GZ-MG157US, GZ-MG20US, GZ-MG21US, GZ-MG255US, GZ-MG27US, GZ-MG30US, GZ-MG31US, GZ-MG330, GZ-MG335, GZ-MG340BUS, GZ-MG35US, GZ-MG360, GZ-MG360BUS, GZ-MG365, GZ-MG365BUS, GZ-MG37US, GZ-MG40US, GZ-MG430HUS, GZ-MG435HUS, GZ-MG465BUS, GZ-MG50US, GZ-MG505US, GZ-MG55US, GZ-MG555US, GZ-MG57US, GZ-MG67US, GZ-MG70US, GZ-MG730, GZ-MG730BUS, GZ-MG77US, GZ-MS100, EAVINU Portable, Navigation KV-PX9B
Kodak	Picture Viewer, Digital Frame EX-1011, Digital Frame EX-811, Digital Frame S-510, Digital Frame SV-1011, Digital Frame SV-710, Digital Frame SV-811, Photo Printer 300, Photo Printer 500, Printer Dock Plus série 3, Printer Dock série 3
Konica – Minolta	DiMAGE E223, DiMAGE G400, DiMAGE G530, REVIO KD-100Z, REVIO KD-220Z, REVIO KD-25, USB-810
Kyocera	FineCam L3V, FineCam M410R, FineCam S3, FineCam S3L, FineCam S5, FineCam S5R, FineCam SL300R
Leica	Digilux 1, Digilux 2, Digilux 3, Zoom Flex-10, Zoom Flex-2, Zoom Flex-5
Lowrance	iway 250C, iway 350, iway 500C, iway 600C,
Magellan	CrossoverGPS, RoadMate 2000, RoadMate 2200T, RoadMate 300, RoadMate 3000T, RoadMate 3050T, RoadMate 360, RoadMate 500, RoadMate 6000T, Roadmate 700, RoadMate 760, RoadMate 800, RoadMate 860T
Mitac	C310s DigiWalker, C310x DigiWalker, C710 Car Navigation, H610 Mio DigiWalker, P350 Mio DigiWalker
Motorola	C290, C331g, C332, C333g, c650, ic402, ic502, KRZR K1, KRZR K1m, L2, maxxVe, PEBL U6, Q, RAZR, RIZR Z3, ROKR Z6, SLVR L6, SLVR L7, SLVR L7c, V3, V3a, V3c, V3i, V3m, V3r, V3t, V3x, V3xx, V6, V8, V180, V188, V190, V195, V220, V235, W315, W317, V323, V323i, V325, v325i, V360, V361, V365, W385
Myguide	3000 GO, 3050 GO, 3200 GO, 3240 GO, Silverguide 4350 NAV, Silverguide 5000 Series, Typhoon 3230 GO, Typhoon 5500 GO
Mustek	DV2000, DV3000, DV3032, DV3032, DV3500, DV4000, DV5000, DV5200, DV5300SE, DV5500, DV5600, DV5700, DV8200, DV8200, DV9300, DV9300, G-Smart 300, G-Smart 350, G-Smart D30, G-Smart D35, G-Smart D50, G-Smart D55, G-Smart LCD, G-Smart LCD2, G-Smart LCD3, G-Smart Mini, G-Smart Mini 2, G-Smart Mini 3, MDC1500, MDC3000, MDC3500, MDC4000, MDC5000, MDC5000z, MDC5500z, MDC6500z, MDC800, SoccerCam, VDC100, VDC200, VDC210, VDC300
Navman	Freedom Range F20, Freedom Range F20 EU, Freedom Range F30, Freedom Range F40 EU, Freedom Range F50, iCN 750
Nextar	C3, HGPS35, I4-BC, K4, M3, M3-01, M3-02, M3-03, M3-04, M3-06, M3-MX, ME, Navigator P7, Q3, Q3-01, Q4, Q4-01, Q4-02, Q4-03, Q4-04, Q4-MD, S3, W3, W3-01, W3G, X3, X3-01, X3-02, X3-03, X3-05, X3-07, X3-08, X3-09, X3-10, X3-T, X3B, X3i, X3i-02, X3i-03, X3T, X4, X4-T, X4T
Nikon	CoolPix 2000, D1, D100, D1H, D1X, D200, D2H, D2Hs, D2X, D2Xs, D3, D300, D3X, D40, D40X, D50, D60, D70, D700, D70s, D80, D90
Nokia	3109, 3110, 3500, 5200, 5300, 5700, 5500, 5510, 6110, 6120, 6121, 6124, 6267, 6290, 6300, 6301, 7390, 7500, E-51, E90, N76, N91, N95, N-Gage

Novogo	A700 , C700 , C900 , T700 , T900
Olympus	C-150, C-150 Zoom, C-160 Zoom, C-2 Zoom, C-220 Zoom, C-300 Zoom, C-350 Zoom, C-380, C-380 Zoom, C-390, C-4000 Zoom, C-4100, C-4100 Zoom, C-450 Zoom, C-450 Zoom del Sol, C-460 Zoom, C-50 Zoom, , C-5000 Zoom, C-5050 Zoom, C-5060 Wide Zoom, C-520 Zoom, C-550 Zoom, C-60 Zoom, C-7070 Wide Zoom, C-720 Ultra Zoom, C-725 Ultra Zoom, C-730 Ultra Zoom, C-740 Ultra Zoom, C-750 UItra Zoom, C-755 UItra Zoom, C-760 Ultra Zoom, C-765 Ultra Zoom, C-770 Ultra Zoom, C-8080 Wide Zoom, D-380, D-390, D-395, D-520 Zoom, D-535 Zoom, D-540 Zoom, D-550 Zoom, D-555 Zoom, D-560 Zoom, D-565 Zoom, D-575 Zoom, D-580 Zoom, D-590 Zoom, E-1, E-3, E30, Evolt E-300, FE-100, FE-110, FE-115, FE-170, FE-210, FE-270, IR-300, IR-500, Stylus 300 Digital, Stylus 400 Digital, Stylus 410 Digital, X-1, X-2, X-200, X-250, X-300, X-400, Ferrari camera dock, µ-10, µ-15, µ-20, µ-25, µ-30, µ-300, µ-400, µ-410
Oncourse	MyGuide 300 , MyGuide 500 , MyGuide 700
Opus	Opus 4000
Panasonic	Lumix DMC-FZ1, Lumix DMC-FZ10, Lumix DMC-FZ10K, Lumix FZ1S, Lumix DMC-L1, Lumix DMC-L33, Lumix DMC-LC1, Lumix DMC-LC3, Lumix DMC-LC33, Lumix DMC-LC40, Lumix DMC-LC43, Lumix DMC-LC5, PV-DV203, PV-G50US, PV-GS180, PV-GS300, PV-GS35, PV-GS39, PV-GS50, PV-GS500, PV-GS70, PV-GS80, PV-GS85, SDR-H18, SDR-H20, SDR-H200, SDR-S100, SV-AV100, SV-AV25, VDR-D100, VDR-D105, VDR-D200, VDR-D230, VDR-D250, VDR-D300, VDR-D310, VDR-D50, VDR-D75, NV-GS75
Pentax	Optio 30, Optio 330RS, Optio 430RS
Pharos	E-Z Road Pocket Navigator
Philips	Nike psa[128max , Nike psa[64 , psa[256max , RUSH SA220 , RUSH SA230 , RUSH SA235 , RUSH SA238
Pioneer	Portable Sat Nav - AVIC-S1
Polaroid	A310, A500, A520, A550, iON 230, PDC-1000, PDC-1050, PDC-1075, PDC-2150, PDC-2300z, PDC-2350, PDC-2510, PDC-3350, PDC-3375, PDC-3510, PDC-4350, PDC-4370
Qstarz	NV-Q1200 , NV-Q1400
RCA	Lyra A/V Jukebox RD2780 , Lyra Jukebox RD2800 , Lyra Jukebox RD2820 , Lyra Jukebox RD2821 , Lyra Jukebox RD2840 , Lyra Mini-Jukebox RD2760 , Lyra RD1020 , Lyra RD1021 , Lyra RD1070 , Lyra RD1071 , Lyra RD1080 , Lyra Wireless R , Lyra RD900W
Ricoh	Caplio GX, Caplio GX100, Caplio GX8, Caplio R1976, Caplio R4, Caplio R5, Caplio R6, Caplio R76, Caplio RR30
Rikaline	GPS-450
RIO	Série: Cali , Carbon , Chiba , Eigen , Forge , Karma , Nitrus
Samsung	Digimax 101, Digimax 200, Digimax 201, Digimax 202, Digimax 230, Digimax 240, Digimax 250, Digimax 255, Digimax 300, Digimax 301, Digimax 330, Digimax 340, Digimax 360, Digimax 401, Digimax 410, Digimax 420, Digimax 50 Duo, Digimax 530, Digimax 800K, SC-D103, SC-D107, SC-D180, SC-D23, SC-D24, SC-D263, SC-D27, SC-D29, SC-D303, SC-D33, SC-D34, SC-D353, SC-D362, SC-D363, SC-D364, SC-D365, SC-D366, SC-D39, SC-D453, SC-D5000, SC-D590, SC-D6040, SC-D6550, SC-D86, SC-D903, SC-D963, SC-D965, SC-DC163, SC-DC164, SC-DC165, SC-DC563, SC-DC564, SC-DC565, SC-L700, SC-L770, SC-L870, SC-L901, SC-L907, SC-MM10S, SC-X105L - Cradle, SC-X205L, SC-X210L, SC-X220L MP3: YP-35 , YP-55V , YP-60V , YP-T5H , YP-T5V , YP-T6H , YP-MT6V , YP-MT6X , YP-MT6Z , YP-T6X , YP-ST5 , YP-T7JX , YP-T7JZ , YP-T7X , YP-T7Z
Sharp	VL-Z3U, VL-Z7U
Sigma	SD-10 (USB), SD-14 (USB), SD-9 (USB)
Sipix	StyleCam Blink II

Sony	<p>CCD-TRV608, CSS-TNA, DCR20E, DCR-DVD7E, DCR-DVD100, DCR-DVD100E, DCR-DVD101, DCR-DVD101E, DCR-DVD200, DCR-DVD200E, DCR-DVD201, DCR-DVD201E, DCR-DVD203E, DCR-DVD300, DCR-DVD403E, DCR-DVD505E, DCR-DVD7E, DCR-HC1000, DCR-HC14E, DCR-HC18E, DCR-HC19E, DCR-HC20, DCR-HC20E, DCR-HC21, DCR-HC22E, DCR-HC26, DCR-HC30, DCR-HC30E, DCR-HC32E, DCR-HC38, DCR-HC39E, DCR-HC40, DCR-HC40E, DCR-HC42E, DCR-HC65, DCR-HC85, DCR-HC85E, DCR-HC90E, DCR-IP1, DCR-IP1E, DCR-IP220, DCR-IP220E, DCR-IP45, DCR-IP55, DCR-IP55E, DCR-IP7BT, DCR-IP7E, DCR-PC1, DCR-PC10, DCR-PC100, DCR-PC100E, DCR-PC101, DCR-PC101E, DCR-PC103E, DCR-PC105, DCR-PC105E, DCR-PC106E, DCR-PC107E, DCR-PC109, DCR-PC109E, DCR-PC110, DCR-PC115, DCR-PC120BT, DCR-PC120E, DCR-PC330, DCR-PC330E, DCR-PC350, DCR-PC350E, DCR-PC53E, DCR-PC55E, DCR-PC9, DCR-TRV140, DCR-TRV14E, DCR-TRV17, DCR-TRV18, DCR-TRV19, DCR-TRV19E, DCR-TRV22, DCR-TRV22E, DCR-TRV240, DCR-TRV245E, DCR-TRV25, DCR-TRV250, DCR-TRV250E, DCR-TRV25E, DCR-TRV260, DCR-TRV265E, DCR-TRV27, DCR-TRV270E, DCR-TRV285E, DCR-TRV30, DCR-TRV33, DCR-TRV330, DCR-TRV33E, DCR-TRV340, DCR-TRV340E, DCR-TRV350, DCR-TRV355E, DCR-TRV360, DCR-TRV38, DCR-TRV39, DCR-TRV40E, DCR-TRV460, DCR-TRV460E, DCR-TRV480E, DCR-TRV50, DCR-TRV50E, DCR-TRV530, DCR-TRV60E, DCR-TRV70, DCR-TRV730, DCR-TRV740, DCR-TRV740E, DCR-TRV80, DCR-TRV80E, DCR-TRV830, DCR-TRV840, DCR-TRV950, DPP-EX50, DPP-FP30, DPP-FP50, DSC-F707, DSC-F717, DSC-F77, DSC-F828, DSC-F88 dock, DSC-FX77, DSC-G1, DSC-H1, DSC-H2, DSC-H5, DSC-L1, DSC-M2 – Cradle, DSC-P1, DSC-P10, DSC-P100 dock, DSC-P12, DSC-P150 dock, DSC-P2, DSC-P20, DSC-P200 dock, DSC-P3, DSC-P30, DSC-P31, DSC-P32, DSC-P41, DSC-P43, DSC-P5, DSC-P50, DSC-P51, DSC-P52, DSC-P7, DSC-P71, DSC-P72, DSC-P73, DSC-P8, DSC-P9, DSC-P92, DSC-P93, DSC-P93A, DSC-R1, DSC-S40, DSC-S500, DSC-S600, DSC-S75, DSC-S85, DCR-SR300C, DSC-U10, DSC-U20, DSC-U20/B, DSC-U20/LJ, DSC-U30, DSC-U40, DSC-U40/B, DSC-U40/R, DSC-U50, DSC-U60, DSC-V1, DSC-V3, DSC-W1, DSC-W1/B, DSC-W30, DSC-W35, DSC-W5, DSC-W7, HDR-HC1E, MVC-CD200, MVC-CD250, MVC-CD300, MVC-CD350, MVC-CD400, MVC-CD500, MVC-FD92, MVC-FD100, MVC-FD200, MVC-FD92, MVC-FD97, VMC-14UMB, VMC-14UMB2</p> <p><i>MP3:</i> MZ-420D, MZ-N420D, MZ-NE410, MZ-N505, MZ-N707, MZ-NF520D, MZ-NF810CK, MZ-NH600D, MZ-S1, MZ-S2, MZ-Sports, NetMD</p>
Tomtom	Go 300 , Go 500 , Go 510 , Go 700 , Go 910 , ONE
Toshiba	PDR-M500, PDR-M700, PDR-T10, PDR-T20, PDR-T30
Traveler	DC3000, DC3300
Vivitar	<p>ViviCam 25, ViviCam 30, ViviCam 3301, ViviCam 3315, ViviCam 3325, ViviCam 3340, ViviCam 3345, ViviCam 3350, ViviCam 3350B, ViviCam 3350S, ViviCam 3355, ViviCam 3355T, ViviCam 35, ViviCam 3555, ViviCam 3555T, ViviCam 3610, ViviCam 3625, ViviCam 3630, ViviCam 3632, ViviCam 3640, ViviCam 3650, ViviCam 3675, ViviCam 3705, ViviCam 3710, ViviCam 3715, ViviCam 3730, ViviCam 3735, ViviCam 3740, ViviCam 3746, ViviCam 3750, ViviCam 3755, ViviCam 3765, ViviCam 3805, ViviCam 3825, ViviCam 3826, ViviCam 3935, ViviCam 5100, ViviCam 55, ViviCam 60, ViviCam 6150S</p> <p>DVR-200, DVR-310, DVR-390H, DVR-510</p>