

USB 2.0 kabel A - miniUSB PANASONIC 8pin, 1,8m

Katalogové číslo: 11.98.8142

Náhrada za originální kabely:

Acer: Acer USB kabel 8-pin

Fuji: P645-083-1355

Konica / Minolta: USB-2, USB-3

Nikon: UC-E6

Pentax: I-USB7, I-USB17, I-USB33

Olympus: CB-USB7, #202059

Panasonic: K1HA08CD0007, K1HA08CD00013, K1HA08CD0019

Sanyo: 6450780943

Použitelné pro zařízení:

(fotoaparáty/kamery)

Acer	CE-5330, CE-5430, CE-6430, CI-6330
Fuji	FinePix A100, FinePix A150, FinePix A160, FinePix A170, FinePix A175, FinePix A180, FinePix A220, FinePix A235, FinePix A850, FinePix A860, FinePix AV100, FinePix AV200, FinePix AV230, FinePix AV250, FinePix AV280, FinePix AX200, FinePix AX250, FinePix AX300, FinePix AX330, FinePix AX350, FinePix AX380, FinePix F100fd, FinePix F20, FinePix F20se, FinePix F200EXR, FinePix F30, FinePix F31, FinePix F31fd, FinePix F40, FinePix F40fd, FinePix F45, FinePix F45fd, FinePix F460, FinePix F47, FinePix F470, FinePix F47fd, FinePix F480, FinePix F50, FinePix F50fd, FinePix F50se, FinePix F60fd, FinePix F650, FinePix F70, FinePix F70EXR, FinePix F75, FinePix F75EXR, FinePix F80EXR, FinePix F85EXR, FinePix HS10, FinePix HS11, FinePix J10, FinePix J100, FinePix J110W, FinePix J12, FinePix J120, FinePix J150W, FinePix J15fd, FinePix J20, FinePix J25, FinePix J250, FinePix J26, FinePix J28, FinePix J29, FinePix J30, FinePix J38, FinePix J50, FinePix JV100, FinePix JV110, FinePix JV150, FinePix JV200, FinePix JV250, FinePix JV255, FinePix JV300, FinePix JX200, FinePix JX210, FinePix JX250, FinePix JX300, FinePix JX350, FinePix JX400, FinePix JX530, FinePix JZ300, FinePix JZ310, FinePix JZ500, FinePix Real 3D W1, FinePix Real 3D W3, FinePix S1000fd, FinePix S100fx, FinePix S1500, FinePix S2000HD, FinePix S200EXR, FinePix S205EXR, FinePix S5700, FinePix S5800, FinePix S6000fd, FinePix S700, FinePix S800, FinePix S8000, FinePix S8000fd, FinePix S8100fd, FinePix T200, FinePix T300, FinePix XP10, FinePix XP11, FinePix XP20, FinePix XP30, FinePix Z10, FinePix Z100, FinePix Z100fd, FinePix Z10fd, FinePix Z200fd, FinePix Z200FW, FinePix Z20fd, FinePix Z250fd, FinePix Z30, FinePix Z300, FinePix Z31, FinePix Z33, FinePix Z33WP, FinePix Z35, FinePix Z37, FinePix Z60fd, FinePix Z70, FinePix Z700exr, FinePix Z707exr, FinePix Z71, FinePix Z800exr, FinePix Z808exr, FinePix Z90
General Electric	A730, A735, A830, E1030, E1040, E1240, E850, G1, X1
Insignia	NS-DSC10B, NS-DSC7B09, NS-DSC7P09, NS-DSC7S09
Konica /	DiMAGE A200, DiMAGE E323, DiMAGE E500, DiMAGE X60, DiMAGE X1 - jen

Minolta	dok, DiMAGE X50, DiMAGE Z3, DiMAGE Z5, DiMAGE Z6, DiMAGE Z10, DiMAGE Z20, Dynax 5D, Dynax 7D, Maxxum 5D, Maxxum 7D
Nikon	CoolPix 2100, CoolPix 2200, CoolPix 3100, CoolPix 3200, CoolPix 3700, CoolPix 4100, CoolPix 4200, CoolPix 4600, CoolPix 4800, CoolPix 5200, CoolPix 5600, CoolPix 5900, CoolPix 7600, CoolPix 7900, CoolPix 8400, CoolPix 8800, CoolPix L1, CoolPix L10, CoolPix L100, CoolPix L11, CoolPix L12, Coolpix L14, Coolpix L15, CoolPix L16, CoolPix L18, CoolPix L19, CoolPix L2, CoolPix L20, CoolPix L3, CoolPix L4, CoolPix L5, CoolPix L6, CoolPix P1, CoolPix P2, CoolPix P3, CoolPix P4, CoolPix P50, CoolPix P5000, CoolPix P5100, CoolPix P60, CoolPix P6000, CoolPix P80, CoolPix P90, CoolPix S10, CoolPix S200, CoolPix S210, CoolPix S220, CoolPix S230, CoolPix S4, CoolPix S500, CoolPix S510, CoolPix S520, CoolPix S560, CoolPix S600, CoolPix S620, CoolPix S630, CoolPix S9, CoolPix SQ
Panasonic	DMC-FS20, DMC-FS3, DMC-FS5, DMC-FX01, DMC-FX10, DMC-FX100, DMC-FX101, DMC-FX12, FX150, DMC-FX2, DMC-FX3, DMC-FX30, DMC-FX33, DMC-FX35, DMC-FX38, DMC-FX50, DMC-FX55, DMC-FX7, DMC-FX8, DMC-FX9, DMC-FZ15, DMC-FZ18, DMC-FZ20, DMC-FZ28, DMC-FZ3, DMC-FZ30, DMC-FZ4, DMC-FZ5, DMC-FZ50, DMC-FZ7, DMC-FZ8, DMC-G1, DMC-L10, DMC-LS1, DMC-LS2, DMC-LS70, DMC-LS75, DMC-LX1, DMC-LX2, DMC-LX3, DMC-LZ1, DMC-LZ10, DMC-LZ2, DMC-LZ3, DMC-LZ4, DMC-LZ5, DMC-LZ6, DMC-LZ7, DMC-LZ8, DMC-TZ1, DMC-TZ2, DMC-TZ250, DMC-TZ3, DMC-TZ3B, DMC-TZ4, DMC-TZ5, DMC-TZ50, DMC-TZ8
Pentax	DL, *ist DL, *ist DS, *ist DS2, K10D, K100D, K110D, K2000, K20D, K200D, K7, Optio 33WP, Optio 33WR, Optio 43WR, Optio 450, Optio 50, Optio 550, Optio 555, Optio 60, Optio 750Z, Optio A10, Optio A20, Optio A30, Optio A40, Optio A50, Optio E10, Optio E20, Optio E30, Optio E40, Optio E50, Optio E70, Optio E80, Optio M10, Optio M20, Optio M30, Optio M60, Optio MX, Optio MX4, Optio P70, Optio P80, Optio S, Optio S10, Optio S12, Optio S4, Optio S40, Optio S45, Optio S4i, Optio S50, Optio S51, Optio S55, Optio S5i, Optio S5n, Optio S5z, Optio S6, Optio S60, Optio S7, Optio SV, Optio T10, Optio T20, Optio T30, Optio T40, Optio V10, Optio V20, Optio W10, Optio W20, Optio W30, Optio W60, Optio W80, Optio WP, Optio WPi, Optio WS80, Optio X-dock
Sanyo	VPC-503, VPC-603, VPC-E6, VPC-E6U, VPC-S500, VPC-S60, VPC-S600
Olympus	FE-150, FE-160, FE-180, FE-190, FE-20, FE-220, FE-230, FE-240, FE-250, FE-260, FE-270, FE-280, FE-290, FE-300, FE-3000, FE-3010, FE-310, FE-320, FE-330, FE-340, FE-350, FE-360, FE-370, FE-4000, FE-4010, FE-45, FE-46, FE-47, FE-500, FE-5000, FE-5010, FE-5020, FE-5030, FE-7010, MJU-5000, Stylus 7010, Stylus 7029, X-15, X-751, X-785, X-790, X-795, X-800, X-820, X-835, X-845
Sony	DSC-S650, DSC-S700, DSC-S730, DSC-S750, DSC-S780, DSC-S800, DSC-S850, DSC-W180, DSC-W190, DSLR-A100, DSLR-A200, DSLR-A230, DSLR-A300, DSLR-A330, DSLR-A350, DSLR-A450, DSLR-A500, DSLR-A550, DSLR-A700, DSLR-A900
Vivitar	ViviCam 3000, ViviCam 4345, ViviCam 4385, ViviCam 5195, ViviCam 5340s, ViviCam 5385, ViviCam 5386, ViviCam 6300, ViviCam 6320, ViviCam 6324, ViviCam 7310, ViviCam 7388, ViviCam 7388s, ViviCam 8300, ViviCam 8300s, ViviCam 8600, ViviCam 8600s