

USB kabel s konektorem miniUSB 4pin Mitsumi

Katalogové číslo: 11.99.8618

Katalogové číslo: 11.02.8618

Náhrada za originální kabely:

OLYMPUS: CBUSB1, CG-USB1, CD-USB1, CB-USB-1

KODAK: 8539249, U-4

KONICA-MINOLTA: USB-100

HP: C8452-80001

Použitelné pro zařízení:

(fotoaparáty/kamery)(MP3)

BANTAM	BA50, BA350, BA800
Compaq	IPAQ MP3 Player, IPAQ PA-1 MP3 Player, IPAQ PA-2 MP3 Player
Creative	Rhomba PA50
EPSON	PhotoPC 3000Z, PhotoPC 3100Z, CP-900Z
GPX	TEC100
HP	Photosmart315, Photosmart315vm, Photosmart315xi
iRock	510, 520, 530
JVC	GC-QX3, GC-X, GC-X3
Kodak	C300, CX4200, CX4210, CX4230, CX4300, CX4310, CX6200, CX6230, CX6330, CX6445, CX7220, CX7300, CX7310, CX7330, CX7430, CX7525, CX7525, CX7530, DC4800, DX3215, DX3500, DX3600, DX3700, DX3900, DX4330, DX4530, DX4900, DX6340, DX6440, DX6490, DX7440, DX7590, DX7630, LS420 (přes Dock), LS443, LS633, LS743, LS753, Z7590 <i>Kodak Easyshare Dock:</i> Camera Dock II, Camera Dock, Camera Dock 6000, Printer Dock 6000, Pointer Dock, Pointer Dock 4000, Pointer Dock Plus, Photo Frame Dock, LS420 Camera Dock, LS443 Camera Dock
Konica – Minolta	DiIMAGE 5, DiIMAGE 7, DiIMAGE 7i, DiIMAGE 7Hi, DiIMAGE 2330, DiIMAGE E203
MPIO	MPIO DMG
Nikon	D150, D510, E10
Olympus	Camedia 2112-DP, Camedia C-1, Camedia C-1 Zoom, Camedia C-2, Camedia C-200 Zoom, Camedia C-211 Zoom, Camedia C-700 UltraZoom, Camedia C-2040 Zoom, Camedia C-2100 UltraZoom, Camedia C-3000 Zoom, Camedia C-3020 Zoom, Camedia C-3030 Zoom, Camedia C-3040 Zoom, Camedia C-4040 Zoom, Camedia D-510 Zoom, Camedia E-10, Camedia E-100RS, Camedia E-20, Camedia E-20N, Camedia E-20P, Camedia FE-290 <i>Olympus Brio:</i> Brio D-100, Brio D-150, Brio D-150 Zoom, Brio D-230, Brio D-51 Zoom
POGO	RipFlash DX
RCA	REB1100 RCA EBOOK 1100, REB1200 RCA EBOOK 1200
SAMSUNG	DIGIMAX-210SE, DIGIMAX-220SE, DIGIMAX-350SE YP-NDU, YP-NEU32, YP-NEU64
Sanyo	DSC-SX550, DSC-SX560, IDC-1000

Sharp	VE-CG40U
SIPIX	SC-3300
SONY	DSCS-30, DSCS-50, DSCS-70, DSC-F55V, DSC-F505, DSC-F505v, MVC-CD1000 MC-P10, NW-MS7 Walkman, NW-S4 Network Walkman